

UNIVAC-NTDS-TELETYPEWRITER CODES

TELETYPEWRITER SELECTING PULSES




13 MSEC EACH 19MSEC
AT 100 WPM

LETTERS	FIGURES	OCTAL
_____ A _____	_____ - _____	_____ 30
_____ B _____	_____ ? _____	_____ 23
_____ C _____	_____ : _____	_____ 16
_____ D _____	_____ \$ _____	_____ 22
_____ E _____	_____ 3 _____	_____ 20
_____ F _____	_____ ! _____	_____ 26
_____ G _____	_____ & _____	_____ 13
_____ H _____	_____ _____	_____ 05
_____ I _____	_____ 8 _____	_____ 14
_____ J _____	_____ , _____	_____ 32
_____ K _____	_____ (_____	_____ 36
_____ L _____	_____) _____	_____ 11
_____ M _____	_____ . _____	_____ 07
_____ N _____	_____ ' _____	_____ 06
_____ O _____	_____ 9 _____	_____ 03
_____ P _____	_____ ø _____	_____ 15
_____ Q _____	_____ 1 _____	_____ 35
_____ R _____	_____ 4 _____	_____ 12
_____ S _____	BELL (Δ*) _____	_____ 24
_____ T _____	_____ 5 _____	_____ 01
_____ U _____	_____ 7 _____	_____ 34
_____ V _____	_____ ; _____	_____ 17
_____ W _____	_____ 2 _____	_____ 31
_____ X _____	_____ / _____	_____ 27
_____ Y _____	_____ 6 _____	_____ 25
_____ Z _____	_____ " _____	_____ 21
_____ SPACE _____	_____ ■* _____	_____ 04
_____ BLANK _____	_____ }* _____	_____ 00
_____ LETTERS _____	_____ v* _____	_____ 37
_____ FIGURES _____	_____ ^* _____	_____ 33
_____ LINE FEED _____	_____ ≡* _____	_____ 10†
_____ CARRIAGE RETURN _____	_____ <* _____	_____ 02†

MACHINE
FUNCTIONS

* PRINTED ON TAPE ONLY

† Both codes necessary for complete carriage return

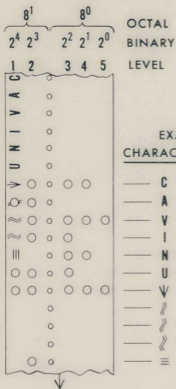

EXAMPLES

CHARACTER	OCTAL
— C —	16
— A —	30
— V —	17
— I —	14
— N —	06
— U —	34
— √ —	37
— ∞ —	00
— ∞ —	00
— ∞ —	00
— ≡ —	10

EXTERNAL FUNCTION CODES

COMPUTER → ADAPTER	
MASTER CLEAR	010
RCV DATA FROM COMP	020
XMIT DATA TO COMP	040
DISABLE	200

INTERRUPT CODES

ADAPTER → COMPUTER	
DATA READY FOR XMIT	01
TELETYPE NOT OPERATIONAL	02
TELETYPE OPERATIONAL	04
END OF TRANSMISSION 10 (PRODUCED BY ADAPTER WHEN 33 IS FOLLOWED BY A 05)	

